

Now **FIRE** has met its match with...

FLAME CHECK PLUS

FLAMECHECK PLUS is a simple fire retardant spray that helps to safeguard people and property. Odourless and colourless, **FLAMECHECK PLUS** prevents fire catching hold and significantly reduces the speed at which fire will spread. This gives critical extra time to allow the safe evacuation of vulnerable people and enables you to alert others at risk.

FLAMECHECK PLUS can be sprayed onto cotton, polyester or polycotton mix (as listed in our test certificates).

The treatment should be re-applied annually, IT IS ESSENTIAL IF THE MATERIAL GETS WET IN ANY WAY TO RE-TREAT IT TO MEET FLAMMABILITY REQUIREMENTS.

For test certificate information visit www.flamecheck.co.uk

- **FLAMECHECK PLUS** is colourless, odourless, non-toxic and non-corrosive.
- After drying **FLAMECHECK PLUS** cannot be seen or felt.
- One litre of **FLAMECHECK PLUS** covers approximately 30–35 square metres.
- Materials treated with **FLAMECHECK PLUS** will comply to BS 5867-2 Type B: 2008 flammability standard.



Suitable for treating
**POLYCOTTON
MATERIALS**

Colourless, Odourless,
Versatile, Effective and Safe

WWW.SHOWTECHNIX.co.nz 07 552 52 51

Application Guidelines

Applying Flamecheck Plus is a straight forward process; by following our simple application guide below you can apply Flamecheck Plus to a range of different absorbent materials (see appropriate test reports at www.flamecheck.co.uk).



PRIOR TO STARTING APPLICATION

- The surface to be treated must be clean and dust free.
- Remove all loose cushions and coverings, treat each one of these separately.
- Test the fabric to be treated for absorbency and colour fastness: spray Flamecheck Plus on a small unobtrusive area of each type of material and allow to dry prior to general application.

APPLICATION STEP BY STEP GUIDE

STEP 1 Put on protective gloves and eye protection




STEP 2 Point the trigger away from you



STEP 3 Rotate the nozzle to the spray position

STEP 4 Pull the trigger twice so that any moisture that may have become trapped is removed

STEP 5 Hold the spray approximately 300mm away from the surface to be treated

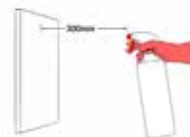

STEP 6 Begin spraying the surface making sure Flamecheck Plus is applied evenly

STEP 7 Use smooth sweeping motions from left to right, & up and down, covering all areas of the fabric, applying lightly.



STEP 8 Apply 2 light coats of Flamecheck Plus, 10 minutes apart to the front & back

STEP 9 Ensure good coverage to the edge and into corners

STEP 10 Do not over apply – the application does not require the surface to appear “wet”

STEP 11 Allow to dry fully (6 to 12 hours)

HANDY TIPS

- Have paper towels available to wipe up drips or spills
- When spraying large surfaces like curtains, use clothes pegs to mark your progress to help ensure an even coverage
- Flamecheck Plus may corrode some metals. If sprayed on metal wipe off with a wet cloth

Keep out of reach of children

If swallowed seek medical advice immediately and show the container or label

Do not apply with compressed air

For more information consult the Flamecheck Plus Materials Safety. Data Sheet at www.SHOWTEHNIX.co.nz